Read before you play!

Tamagotchi × m!x

たまごっちみくす

©BANDAI,WiZ

User's Guide

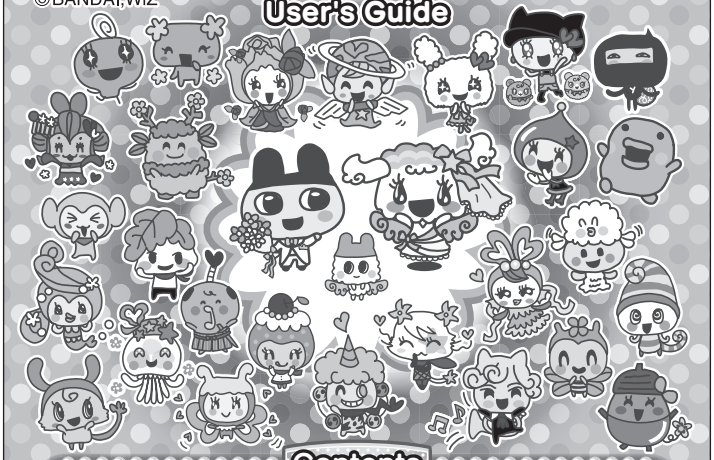

Contents

■The Product — 4
■First…The Birrth of Tamagotchi — 5
■The Life of Tamagotchi — 7
■A Child Looks Like its Parents! — 8
■The Screen — 8
■Caring for Your Tamagotchi — 9
●Status･Settings — 10
●Meals･Treats — 11
●Restroom･Bath — 11
●Connection･Password — 12
●Family — 16
●Going out in your own town — 17
●Going out to TamaFriend's town — 19
●Treasure box — 21
●Memory — 22
●First aid kit — 24
■Replacing Batteries — 24
■Troubleshooting — 25
■The Start Button — 27
■Notices about Downloading — 27

This guide is for Tamagotchi m!x Melody m!x and Spacy m!x versions.

BANDAI 2016 MADE IN CHINA

⚠WARNING

Dear Guardian,
Please read the followings.

●This product has small parts, which may be swallowed, and become a choking hazard. Not for children under 3 years of age.

⚠CAUTION

●Beware of swallowing, such as of AAA batteries (especially by children under 3 years of age).
●This product is equipped for wireless connection of radio waves. Placement and use may affect medical equipment. Do not use connection features in areas where radio use is prohibited.

《Misuse of batteries could result in heating, rupture, combustion, or leakage. Be cautious of the following.》

●Should liquid leaking from a battery come in contact with the eye, rinse immediately with a large amount of water and consult a physician. Should the liquid come in contact with the skin or clothing, wash with water.
●The batteries should be replaced by a guardian.
●Do not mix old and new batteries, or use different types of batteries together.
●Never use rechargeable batteries.
●Insert batteries the correct way, matching the + and -.
●Remove the batteries if the product is not to be played with for a long time. Leaving the batteries in presents the danger of leakage.

⚠CAUTION

●Do not short-circuit. The high current is dangerous.
●Stop use if the product or the battery becomes wet. This may cause a short-circuit.
●Do not place in water or fire, disassemble, or solder.
●When disposing, follow the instructions of your local government.

For ages 6 and up

《Precautions for use》

●There is no guarantee regarding loss of data due to misuse.
●Do not place in water or operate with wet hands. This may cause the product to break. Avoid use or storage in high humidity.
●This product is composed of precise electronic parts. Do not drop, get wet, soil, or disassemble. Avoid use or storage in high or low temperatures.
●Do not force or bend movable parts and attachable parts of this product in unintended directions.
●Clear cover, tray, and bag are packaging materials. Discard after opening.
●Do not place product on sofas, sheets, tiles or other objects made of plastic. Prolonged contact may cause color transfer.
●May malfunction with other infrared remote controls such as for TVs.
●May malfunction in settings such as by sunlit windows or directly under fluorescent light.
●Press Start bottun in case of malfunction.
●Do not place stickers etc. over the connection component. Connection will not work.
●Connection will not work if obstacles are between the connection components,preventing the detection of infrared rays.
●Do not move product while transmitting.
●Fortune-telling and spells do not guarantee future events.
●Clock accuracy: 10 seconds per day.

The Product

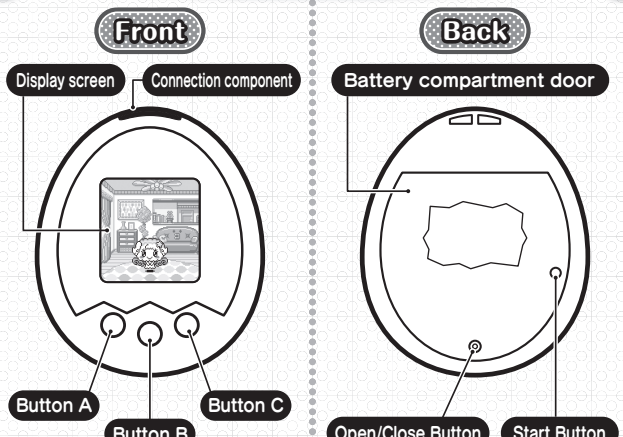

Basic operation	Button A	Button B	Button C
	Select	Execute	Cancel Back

Entering time and birthday	Button A	Button B	Button C twice
	Scroll to next number	Select, Move to next box	Return to previous selection
	Button C and Button A: Scroll to previous number		

* See P.6 for entering letters.

Do not place in water or operate with wet hands. This may cause the product to break. Avoid use or storage in high humidity.

First... The Birth of Tamagotchi

*** Follow the steps below to play with your Tamagotchi m!x.**

①Inserting Batteries

Requires 2 AAA batteries

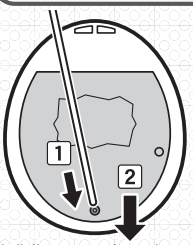

While pressing the Open/Close Button (Start Button) on the back of the product with a narrow point, slide the battery compartment door to open.

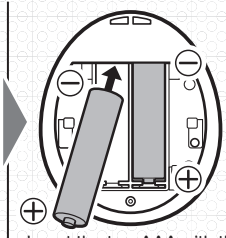

Insert the two AAA with the correct way, matching the + and -. Close the battery compartment door.
Properly closing the battery compartment door will push the Open/Close Button (Start Button). After about a minute after the sound, the time setting screen will be displayed. If no sound plays, press the Open/Close Button (Start Button) with a narrow point.

Alkaline batteries are recommended.
*Compatible with each of the three models (pro,standard,and lite)of Eneloop and Rechargeable Evolta.

②Various Settings and the Birth of Tamagotchi

Setting the clock → Entering your birthday → Entering your name → The birth of Tamagotchi

Details on (→P.4) Details on (→P.4) Details on (→P.6)

Complete the settings, starting with the clock, and an egg will appear in the room. Tamagotchi will be born after about a minute!
*The gender is decided randomly. The same one may occur in a row.

Entering Letters

Cursor

①Move the cursor and select the box to enter a letter in. (The cursor will blink until a selection is made.)

Select box: Button B
Move the cursor to the next box: Button A
Move the cursor to the previous box: Button C

Current row

②Select the row with the letter you want.
*The menu is displayed in the following order: hiragana columns, symbols, smileys, katakana columns, numbers, alphabet, finish. (see (4) below).

Scroll to next row: Button A
Select row: Button B

③Move the cursor and select the letter.

Scroll to next letter: Button A
Select letter: Button B

Confirmation screen

④Select「はい」(yes) on the confirmation screen to finish editing.

●There are three ways to get to the confirmation screen:
・Scroll to「↵」(finish) while scrolling between rows and press Button B.
・Move the cursor to the last box and press Button A.
・Select a letter for the last box and press Button B.

●Energy-saving mode After 30 seconds no button has been pressed, the screen turns off to go into energy-saving mode. Press any button to back to play mode.

The Life of Tamagotchi

Tamagotchi changes in appearance and characteristics as it grows.
It changes according to how you take care of it! The time it goes to sleep depends on the type of Tamagotchi it has grown up to be. Keep an eye on it!

Sample growth pattern

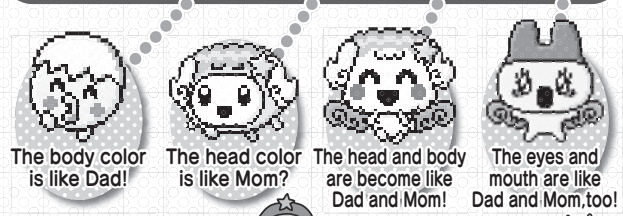
The body color is like Dad!
The head color is like Mom?
The head and body are become like Dad and Mom!
The eyes and mouth are like Dad and Mom,too!

*You can't provide care while it's sleeping.
*Care menu is Limited in the Baby Stage.

A Child Looks Like its Parents!

"m!x"means Tamagotchis getting married and having a child who looks like them. With each generation, a Tamagotchi may grow up to have an appearance different from those before!

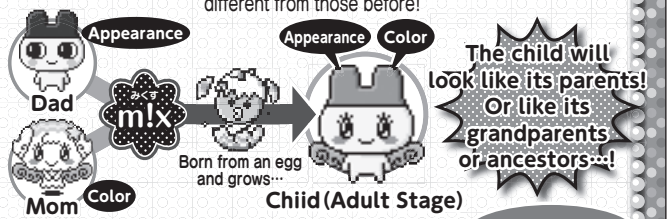

The town appearance may be changed!?

Sometimes,the town may change its appearance to match the Tamagotchi!
It could look like where Dad or Mom lived!?

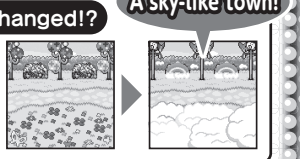

The Screen

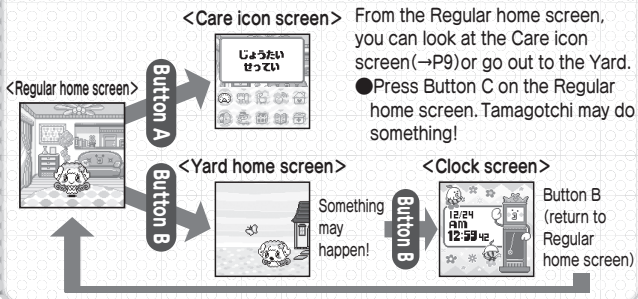

From the Regular home screen, you can look at the Care icon screen(→P9)or go out to the Yard.
●Press Button C on the Regular home screen. Tamagotchi may do something!

Caring for Your Tamagotchi

Use the various Care icons to take care of your Tamagotchi!

Press Button A on the Regular home screen.
It'll be the Care icon screen. Select the matching Care icon to take of it!

Button A:choose the Care icons　Button B:Select
Button C:return to Regular home screen

Care icon screen

- Restroom·Bath(→P.11)
- Meals·Treats(→P.11)
- Connection·Password(→P.12)
- Status·Settings(→P.10)
- Family(→P.11)
- Going out in your own town(→P.17)
- First aid kit(→P.24)
- Going out to a TamaFriend's town(→P.19)
- Memory(→P.22)
- Treasure box(→P.21)

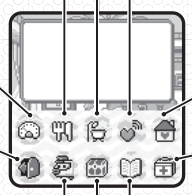

Attention sign

Tamagotchi will call you when it wants to be cared for. Select the matching Care icon to take care of it!

The Attention is on!

Status·Settings

Check the status of your Tamagotchi or change the settings!

First,choose the category you want to look at and select it.

Status

Look at the current status of your Tamagotchi. Check often to see how to care for it!

Button A:switch screens

Name: your name
Tamagotchi name
Gender

Tamagotchi status(1)

Age: increases by 1 per day
Gotchi points: money on Planet Tamagotchi (maximum 99,999 points)

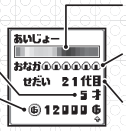

Happiness level: Its mood and how close it is to you
Tummy meter: how hungry it is
Generation: increases by 1 for each child

Tamagotchi status(2)

●To increase the tummy meter,give "Meals".And increase the happiness level,give"Treats".for use"Equipment"!

Settings

You can change the settings of the Tamagotchi m!x itself!

Scroll to the one you want to change and select it.

<じかんせってい> <Time Settings>

adjust the time.

<あかるさせってい> <Brightness Settings>



Change the brightness of the screen.

<サウンドせってい> <Sound Settings>

Turn the sound on or off.

<アイコンバック> <Icon Background>

Change the design behind the icons.

Button A:Darker　Button B:brighter　Button C:finish

●You can change the design behind the icons (icon background)!

Get new designs,and you'll be able to choose the Icon Background menu in「せってい」"Settings"!

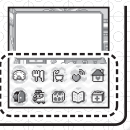

Meals·Treats

Give your Tamagotchi food when it is hungry, or the happiness level is low!

Choose to the place you want to go to and select it.

DL See P.15 about downloading!

Fridge
Café Restaurant

Treats　Meals

Then, select what you want to feed your Tamagotchi. Some have likes and dislikes, so try many kinds!

*Gotchi points are required for food at the「カフェレストラン」"Café Restaurant." The ones labeled "FREE" are available without charge.

Types of food in the fridge　=increases tummy meter　=increases affection level

●Treats increase the affection level! Some might also fill the tummy meter!?

Restroom·Bath

Take your Tamagotchi here if it is wanting to poop or is dirty!

Choose to the place you want to take it to and select it.

●Restroom　If it poops,clean up for it.

If you Tamagotchi is restless,wanting to poop,select "Restroom·Bath" and take it the Restroom!

●Bath

Give your Tamagotchi a bath and make it clean!

Connection·Password

connection with other Tamagotchi m!x or downloading various items!

First,scroll to the connection you want and select it.

「たまごっちm!x」…"Tamagotchi m!x":connection to play with another "Tamagotchi m!x" device.(→P.13)

「ダウンロード」…"Download":download from Tamagotchi m!x Station etc.(→P.15)

「PC」…See the password.play on the website (→P.15)

Directions and Cautions for Connection with another m!x

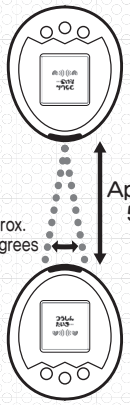

Approx. 5cm
Approx. 20 degrees

Place the connection component of both Tamagotchi m!x units level with each other and within the range shown on the left.
*Connection will not work under sunlight or other bright light.
*Connection will not work if they are too close.
*Tamagotchi m!x cannot connect with Tamagotchi units which are not in the"Tamagotchi m!x series".

When you are both at this screen, **press Button B.**

Connection standby screen

●Watch the screen during connection!

You can move the connection component once this screen is shown.

If this screen is shown,press B to return to the connection standby screen and try again.

*Don't press any buttons while this screen is shown!

Tamagotchi m!x

Connection With Tamagotchi m!x



First,scroll to the menu you want to play and select it.

●Play　Play with your friend's Tamagotchi!

①Select「あそぶ」"Play"and the connectIon standby screen will be shown.
*Do the same on your friend's Tamagotchi m!x to go the connection standby screen.
②Point the units at each other and press Button B.
③When they are connected,one of the activitles below will start!

●Visit

Tamagotchi goes to the other's house!

●Quiz

Tamagotchi tries to guess the dad!

●Photo

Take a photo with your friend!

*Photos taken are saved to 「きねんしゃしん」"Photos"(→P.23) of both you and your friend.

●Gift　Send items to your friend!

①Decide which one of you will give an item,and which one will receive.
②Select「アイテムこうかん」"Gift" in the connection menu.
Select「あげる」"give" if you're giving,and「もらう」"receive"if you're receiving.
③If you're giving,choose the type of item you want to give,then select the item.
The connection standby creen will be shown.
④When both screens show the connection standby screen,point the units at each other and press B to start gifting!

*Items you will lose after giving away:Meals and Treats from the fridge, Equipment,Accessories
*Items you won't lose after giving:Meals and Treats from the Café Restaurant,Mini-games,Going out destinations,Living rooms

●Marriage Proposal　Marriage Proposal to your friend's Tamagotchi!

①To propose marriage, select "プロポーズ" in the connection menu.
*It's OK even if your friend's Tamagotchi m!x series unit is selects something else in the connection menu.
②With your friend's Tamagotchi m!x series unit also showing the connection standby screen, press Button B on one of the units to start the connection.
When they are connected, the Tamagotchi of the one who selected "プロポーズ" will go to the other's Tamagotchi and propose marriage.
*If both had selected "プロポーズ", they will marry right away.
③The one who received the marriage proposal has to select「する」"yes" or「しない」"no" to the marriage.
The connection standby screen will be shown again. Point the units at each other and connect.
④If the other accepts the proposal, the two will marry! Two eggs will be laid.
Each Tamagotchi will take one egg, and both will start life with babies.

*Conditions for proposal: "The other Tamagotchi is of the opposite gender"
"Both Tamagotchis are in the Adult stage"
"The other unit is a Tamagotchi m!x or a Tamagotchi m!x Station"

●Fortune-telling　You can look at your Child prediction or Chemistry check!

①Select「うらない」"Fortune-telling", and the connection standby screen will be shown.
*Do the same on your friend's Tamagotchi m!x to go to the connection standby screen.
②Point the units at each other and press Button B on one of the units.
③When they are connected, you can look at the "Chemistry check", and also "Child prediction" if the two Tamagotchis are of opposite genders and are both in the Adult Stage!

●Child prediction

If your Tamagotchis marry, the child could look like this!

●Chemistry check

Do your Tamagotchis have good chemistry!?

Downloads

Connection with Tamagotchi m!x Station etc.

Download items, room design, etc.!

Download many items such as mini-games and various items from Tamagotchi m!x Stations etc.!

Items/mini-games with the (DL) mark can be downloaded!

●How to download



When they are connected, the downloaded item will be saved to its destination.

It will show up in its download destination or menu!

●Where they're saved　Downloaded items will be saved to the destination as shown in " ".

●Mini-game→"たまデパ·ゲームコーナー"
●Living room→"たまデパ·リフォーム"
●Equipment→"たまデパ·アイテムショップ"
●Accessories→"たまデパ·たまファッション"
●Meals→"カフェレストラン"
●Treats→"Café Restaurant"
●Going out→"たまともたちのタウンへおでかけ"

*If the store items have reached the maximum number, you should delete something to save new items.

See the official website for information such as items downloadable now and Tamagotchi m!x Station or Store locations.

http://tamatv.com/

PC

Play with your Tamagotchi on the website!

Password for the website

Enter the displayed password into the website, and you can play with your Tamagotchi there!

Play with your Tamagotchi m!x on this website!
http://mix.tamatv.com/

Enter the password shown on the screen into the website, then press Button B. When「おでかけじゃんぴOK?」"Go out now?" is shown and you select「はい」"yes"...

Press Button B to move on from the Gone out screen!

When you enter the password shown on the website into your Tamagotchi m!x...

Your Tamagotchi will come back from the website. You may get Gotchi points!?

*If you don't enter any characters but use Button A to move the cursor all the way to the right, your Tamagotchi will come back.

Family

Here's everything you can enjoy about Tamagotchi's family!

Select where you want togo or what you want to see.

Parent's house　Your Tamagotchi's dad and mom will babysit it!

If you take your Tamagotchi to its parent's house, they'll babysit it for you! Take it to the place when you are not available to take care of it!

●They can babysit from morning to evening. After that, Dad and Mom will bring your Tamagotchi back home.
●If you want to take over its care from Dad and Mom, press any button at the caring screen. You'll be asked if you want to take your Tamagotchi home. Select「はい」"yes" to take over.
●They can't babysit when the tummy meter or happiness level is at zero.

Family tree　You can see your Tamagotchi's family tree!

At first, your current Tamagotchi is shown. By pressing Button A is pressed, the previous generation is shown.

See previous generation: Button A
See the password for the displayed generation: Button B

*If your Tamagotchi dies, the family tree ends, and your next generation will start at 1.
*"Family tree" can save data for 20 generations. A password will be displayed for the previous one. Generations before that are overwritten and are gone.
*Up to 999 generations can be displayed.

●Save your Tamagotchi's family tree on the website!

See the official website for details and how to play.

Enter the password displayed in "Family tree" into the website, and you can save the family tree longer than you can on the Tamagotchi m!x unit!

Tamagotchi m!x website

*Please note that you are responsible for any network fees, connection costs, etc.
*Always enjoy with a guardian.

http://mix.tamatv.com/　※たまごっち公式ホームページは日本語のみ対応しています。
*The official Tamagotchi website is available in Japanese only.

Family photo
You can see a photo of the whole family!

You can see the photo of your Tamagotchi's whole family!

*Grandparents are not shown for first-generation characters or those who married at Tamagotchi m!x Station etc.
*You can see a family photo for first-generation Tamagotchi after it reaches the Adult Stage.



Going out in your own town
Have fun at the TamaMall and the Park in your town!

TamaMall
Park
Select the place you want to go.

You need Gotchi points (money on Planet Tamagotchi) at places with the mark on the left.

TamaMall
See P.15 about downloading!

Many different stores are in TamaMall!
Select「かいもの」"Shopping" if you want to shop, or「ゲームコーナー」"Game corner" if you want to play mini-games. Then, select the place you want to go.

*You can have up to 3 of the same item. Be careful! If you buy more, you'll just lose Gotchi points.

Shopping
●If it says "FREE", it costs 0 Gotchi points!

リフォーム Redecorating Redecorate your living room!

Redecorating will change the atmosphere of your room!

アイテムショップ Item shop Buy many kinds of equipment!

Lots of many kinds of equipment♥

たまファッション TamaFashion You can buy lovely accessories!



Lots of fashionable accessories♥

ジュエリー Jewelry You can buy the ring you need to propose!

A ring is required to propose marriage to a TamaFriend in Going out! (→P.20)
Your success rate might be better if you propose with a「ダイヤのゆびわ」"diamond ring"!

Game corner
Earn Gotchi points by playing mini-games!

にじいろペイント Rainbow painter

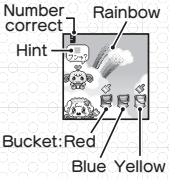

Paint the color of the rainbow that disappeared!
First, look at the original rainbow and remember it. Next, one of the colors will disappear, so select the right color buckets and paint it before the whole rainbow disappears! If the color that disappeared is made by mixing two colors, select those buckets one by one.
If it's the same color as one bucket, select that color twice.
Get it right 10 times to clear the game! If the whole rainbow disappears or you select the wrong color, it's game over!

Button A: chose a color Button B: select a color Button C: quit the game

ほし★キャッチ Star★Catch

Catch the shooting stars and UFOs!
When「キャッチ!!」"Catch!!" is displayed, press the button on the same side as the shooting star or UFO to catch it.
Press once to catch stars and twice to catch UFOs.
Catch 10 times in a row without making a mistake to clear the game! If you press the wrong button, or don't press within the time limit, it's game over!

Button A: catch left one Button B: catch right one Button C: quit the game

Park

Scroll to the place you want to go to and select it.

ひろば Square
Different events will happen!

Chatting Morning market Clean day

プレイルーム Playroom
You can send your Tamagotchi to go play!

You don't need to take care of your Tamagotchi while it's playing in the Playroom! Take it there when you are not available to take care of it!
●If you want to take over its care, press any button at the Playroom screen. You'll be asked if you want to take your Tamagotchi home. Select「はい」"yes" to take over.
●The Playroom can take care of your Tamagotchi from morning to evening.
●They can't take care of it when the tummy meter or happiness level is at zero. Be sure to go pick it up before evening.

●If you go past evening, your Tamagotchi will pout and its happiness level will go down.
●If night comes and you haven't picked it up, it will come back home it by itself, but its happiness level will go down very much. If your Tamagotchi has become timid, press any button to try to make it up.

Going out to TamaFriend's town
You can visit towns, each with a different atmosphere!

See P.15 about downloading!

Visit other towns where TamaFriends live! Choose to the town you want to go to and select it.
●You can go to many places in「たまともたちのタウンへおでかけ」"Going out to a TamaFriend's town".
The towns shown as "???" may get unlocked by certain triggers as you play... Try various things!

You'll be able to go to「メロディランド」"Melody Land" if you have a Melody m!x version, and「スペイシーランド」"Spacy Land" if you have a Spacy m!x version!



Square
The Shop in each town
The Spot in each town
Propose marriage

In each town, choose to where you want to go or what you want to do and select it.
●You can take Equipment with you!

Square
If you become friends with someone at the Square, you might be able to marry them!

You can meet many Tamagotchis at the Square!
●You'll meet different Tamagotchis in each town.
●If you brought Equipment, you can play with the TamaFriend you meet and become buddies.
●They'll be happy if you bring Equipment they like!
●You can see the buddy level at the TamaFriend list (→P.22)!

If you become best friends with a Tamagotchi you meet at a Square, it might propose marriage to your Tamagotchi!
(Tamagotchis in your TamaFriend list (→P.22) are the only ones who may propose marriage.)
If you are proposed marriage to, decide whether to accept and select it.
If you select「はい」"yes", the two will marry! The egg will be laid. (→P.20)
●You can also propose marriage to a Tamagotchi you like! (→P.20)

The Shop in each town
Each town sells exclusive items!

First, select the category of item you want to buy, then select the item.
*You can save up to 3 of the same item in the Treasure box. Be careful! If you buy more, you'll just lose Gotchi points.

The Spot in each town
Each town has a famous spot to play in!



Each town has a different Spot! Can you figure out what to do there!?

Genetic lab in「たまごっちタウン」"Tamagotchi Town"

Patchi's hot springs in「ぱっちのもり」"Patchi's's Forest"

Marriage proposal
Propose marriage to a Tamagotchi you like and get married!

Choose the one to propose marriage to: Button A
Choose the one to propose marriage to: Button B

You can propose for marriage by selecting「プロポーズ」"Proposal" in the town where the Tamagotchi you want to ask lives!
Choose the one you want to propose to and select it.
If it agrees, the two will marry! The next generation egg will be laid. (→P.20)
*You need a「ゆびわ」"ring" to propose. You can buy one at「ジュエリー」"Jewelry" (→P.17) in「たまデパ」"TamaMall". You can check if you have a ring or not by looking in「たからばこ」"Treasure box" →「スペシャル」"Special"goods. (→P.21)
*The higher the buddy level, the better the chance that it will accept the proposal! (→P.22)
*If it says「まだであってないよ」"Not met yet" in the「たまともリスト」"TamaFriend list" (→P.22), you can't propose to that Tamagotchi.

The next generation of Tamagotchi is born!

When two Tamagotchis marry, two eggs appear, and the next generation of Tamagotchis are born!

After the second generation, name the Tamagotchi when it's born! See P.6 for how to enter letters.
*When you reach the 21st generation, the oldest generation will be deleted from the「かけいず」"Family tree" (→P.16), in order. A password for use on the website will be displayed. Make a note of it, and enter it into the family tree on the website! (→P.16)

With a new generation will begin!
●It will live with Dad and Mom until the Baby Stage.

Treasure box

The items you've acquired are saved here!



First, choose the item category you want to look at and select it.

- ●You won't lose items when you use them, but you'll lose it if you give it away. (Some items can't be given.)
- ●Only one of each kind of special item can be saved.
- ●You can save 24 kinds of Equipments and 16 kinds of Accessories.

*To delete an item, scroll to it and select「けす」"Delete."
All of that item will disappear, regardless of how many you had.
For example, if you had three of that item, all three will be deleted.
*Rattle and Blocks cannot be deleted.

Equipment Special

How many you have

First, select Equipment or Special, then select the item you want to use.

●Sample items!
Each Tamagotchi has items it likes and dislikes!
*You can have up to 3 of the each equipment.

Equipment

Skateboard

Cards

Special goods

Eco badge

*Only Equipment for the Baby Stage can be selected while at Dad and Mom's house (→P.16) at the Baby Stage.
*When it grows from Baby Stage to Child Stage, Equipment for the Baby Stage can no longer be selected. Others will become available.

Accessories

You can put an accessory on your Tamagotchi! Scroll to the Accessory you want it to wear and select it.
To take off one that it wears, select「はずす」"Remove"!

*Tamagotchis can wear Accessories starting at the Adult Stage.

Cleaning goods

Select「おそうじグッズ」"Cleaning goods" and clean the room!

Memory

See lots of information and read and write messages!

First, choose the information you want to look at and select it.

- ●If something new has been added to Memory, it will be shown after you select「てちょう」"Memory" in the Care icon screen.

TamaFriend List

Saved from "Going out to a TamaFriend's town"

Tamagotchis you met by "Going out to a TamaFriend's town" are registered here!

Button A: switch screens

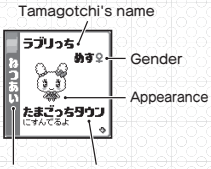

You can look at the list of Tamagotchis you met by "Going out to a TamaFriend's town" and can propose to.

- ●Only Tamagotchis in the towns you've unlocked will be shown in the list.
- ●Tamagotchis you haven't met yet appear as "?".
- ●You can propose for marriage to Tamagotchis of the opposite gender!
  The better friends they are, the better the chance that it will accept the proposal!

●Buddy level

	Neutral ◀ ▶ Buddies			
Same gender	Acquaintance	Friend	Close friend	Best friend
Opposite gender	Acquaintance	Friend	Dating	In love

Friend book

Information about friends you've connected with are recorded here!

Saved by Connection

Button A: switch screens

You can save up to 25 entries in your Friend book.
Even if you connect with new friends, the 26th and newer won't be recorded until you create some empty slots by using「おわかれ」"Good-bye" (→P.23).

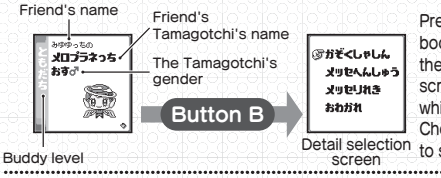

Press B on the Friend book screen to go to the Detail selection screen of the friend which was being shown. Choose what you want to see (do) and select it!

●かぞくしゃしん Family photo

The family photo of your friend's Tamagotchi is saved here!

●メッセへんしゅう Edit messages

Create and edit messages to your friend!
Completed messages will be sent when you connect with that friend for「あそぶ」"Play",「アイテムこうかん」"Gift", or「うらない」"Fortune-telling".
See P.6 for how to enter letters.

●メッセりれき Message history

Button A: switch screens

Messages you've exchanged with your friend are shown the newest first!
*To delete a message, scroll to it, then press Button B and select「けす」"Delete"!
*Careful! If you delete a friend from your Friend book, your messages with that friend will also disappear!

●おわかれ Good-bye

To delete the selected friend from your Friend book, select「する」"yes" from the Good-bye selection screen.

Good-bye selection screen

Photo

Saved by Connection

Button A: switch screens Button B: select

Photos you took with the friend during connection are saved here!
*You can save up to 6 photos.
*To delete a photo, show it, and press Button B then select「けす」"Delete"!

First aid kit

If your Tamagotchi gets sick, hurry and help it get better!

If Tamagotchi becomes like as shown to the right, quickly select「きゅうきゅうばこ」"First aid kit"!

Tamagotchi Cold

Toothache

Tamagotchi dying!?

If you leave it sick or don't look after it well, the Grim Gotchi will come for your Tamagotchi.
When you notice the Grim Gotchi, quickly select「きゅうきゅうばこ」"First aid kit" and call the ambulance!

Grim Gotchi's is here!

Get an ambulance and go straight to hospital!

●If it dies...

If your Tamagotchi dies, the "Death screen" will be shown.
Press Button A to see the profile of the Tamagotchi that died.
If you want to raise a new Tamagotchi after one has died, press Button A while holding down Button C. A new egg will appear in the room, and a Tamagotchi will be born in about a minute!
*Items etc. will be passed on to the new Tamagotchi. (There are some elements which will not be passed on.)

Replacing Batteries

Kandentchi's notification

When your battery has worn down, Kandentchi will let you know. When this screen is shown, you won't be able to do anything. Follow the directions in "First... The Birth of Tamagotchi" (→P.5) to replace both batteries with new ones.

If you select「つづきから」"continue," you can resume taking care of the Tamagotchi you already have.
***Be careful! If you select「データをけす」"delete data," all data will be deleted and reset to factory settings.**
***Deleted data is not guaranteed.**

●Change batteries when...

The batteries may become worn out during continuous play and the following could happen instead of "Kandentchi's notification" being shown. If this happens, replace the batteries and follow the directions in "Replacing batteries" above.

●The screen becomes all dark or shows nothing ●The sound becomes quieter ●The screen flickers or otherwise malfunctions

Troubleshooting

●Connection with another unit of the Tamagotchi m!x series doesn't work!

→Check that the Connection menu of both are correct before trying to connect.
→Connection will not work under sunlight or other bright light.
→Point them at each other the correct distance apart. Holding them too close may also not work. (→P.12)
→When both units are showing the connection standby screen, press Button B again on one of the units.
→Tamagotchi m!x series cannot connect with other Tamagotchi units which are not of the m!x series.

●It's hard to see the LCD screen!

→Adjust the brightness of the screen.(→P.10)

●There's no sound!

→Make sure that the sound setting is set to「オン」"on." (→P.10)

●The screen is black (or is showing nothing), or there's no sound, and pressing the start button doesn't do anything!

→The battery may be worn out.
(Sometimes, the battery wears out before Kandentchi (→P.23) can be shown.)
Follow the directions in "Replacing batteries" above to replace the batteries.

●Tamagotchi won't get up! or won't go to sleep!

→Tamagotchi gets up and goes to sleep by itself at times you set. Check on the clock screen that the time has been set correctly. (→P.7)
If AM/PM is reversed, Tamagotchi's day and night will also be reversed.

●What date would be shown on February 29 during leap years?

→The date setting on the 4U does not automatically apply "leap years."
On February 29th during leap years, please change the "time settings" to February 29(→P.10).
Everything will work as usual from March 1.
*Please check that the date and time are correct, as events may happen on birthdays and commemorative days.

●It won't connect with a Tamagotchi m!x Station!

→Check that the Connection menu selected on your unit is correct.
(Select the Connection menu on your unit according to the directions shown on the Tamagotchi m!x Station.)

The Start Button

●...if the unit stops functioning or the screen is not as normal after a strong blow to the unit, etc.
*If nothing shows on the screen after pressing the start button, remove the batteries and insert them again.

Press the start button, and the「つづきから」"continue"/「データをけす」"delete" data selection screen will be shown.
*After opening and closing the battery compartment door, the start button will be pressed automatically, and the「つづきから」"continue"/「データをけす」"delete" data selection screen will be shown.

Continue/delete data selection screen

●If you want to continue taking care of the Tamagotchi you already had, select「つづきから」"Continue."
After the normal screen is shown, go to「じかんせってい」"Time settings" (→P.10) and set to the current date and time.
●If you want to reset and start from the beginning, select「データをけす」"Delete data."
Then, set the time, birthdate, and name, and a new egg will appear.
A Tamagotchi will be born after a short while.
*Be careful! If you select「データをけす」"Delete data", all data, including "Memory", "Treasure box", "Family tree", and "Message history", will be deleted and reset to factory settings.

Notices about Downloading

●I can't download!
(I can't connect with a cellular phone or a smartphone)

→This product does not support downloading from cellular phonesor smartphones. Information about where you can connect with a Tamagotchi m!x Station etc. can be found on the official website **(tamatv.com)**.

●Tried to download, but「アイテムがいっぱいだよ」"You have too many items!" was displayed

→Each kind of item has a maximum number you can save. Delete saved items from stores (such as TamaMall and Café Restaurant) or saving destinations to reduce what you have. Then, you will be able to download new items. (→P.15)

Tamagotchi m!x is designed for Japan.
We are unable to answer inquiries about its use overseas.